 


(EN)  
**GLASS HEATER**  
**BH-GH10**  
**BH-GH20**  
**Instruction manual**

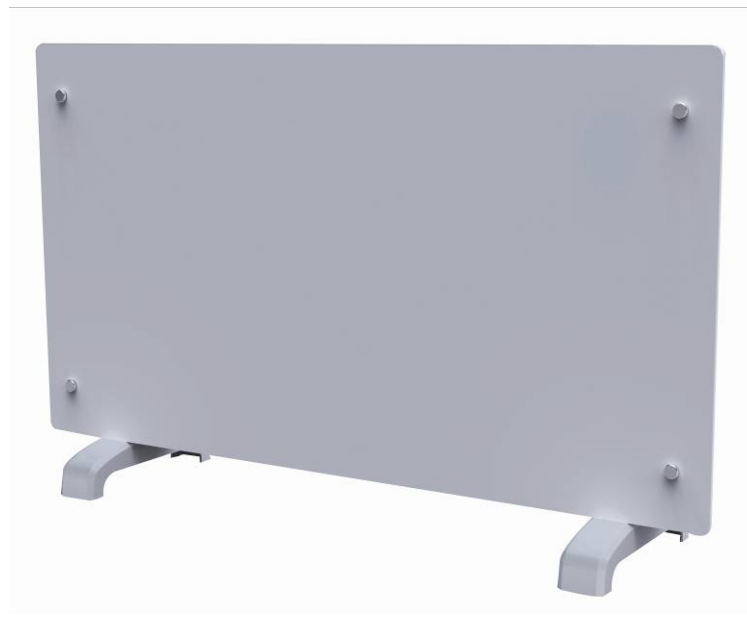

**WinEurope** - FRANCE  
Web: [www.purline.com](http://www.purline.com)



RoHS



Thank you to have chosen the PurLine quality. For a better use of your new device, we recommend you to read carefully this user manual and keep it for record.

## **PACKAGE CONTENTS**

- Glass heater (1 pc)
- Feet (2 pcs)
- Self-tapping screws (4 pcs)
- Instruction manual (1 pc)
- Fixing brackets, screws and plastic wall plugs (4 pcs)

 
## **SAFETY PRECAUTION**

- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been give supervision to ensure that they do not play with the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is designed for domestic use only.
- Do not pull on the connection cord, but rather on the plug, to separate the appliance from the mains.
- Do not use outdoor.
- Do not leave the appliance unattended when it is switched on, as this may bfe a source of danger.
- Stand the appliance on a flat surface.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.




- **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use the heater unless the feet are correctly attached.
- The heater should not be used if the glass plate is damaged.
- The electrical circuit to which the appliance is connected must be in compliance with standard NFC 15-100.
- This appliance must be connected to an earthed outlet.
- The appliance should be protected by a residual current device having a rated residual operating current not exceeding 30 mA.

## **OVERVIEW OF YOUR GLASS HEATER**

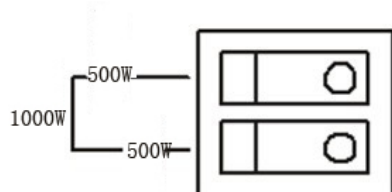

 Heater power switch  
**BH GH10 (1000W)**

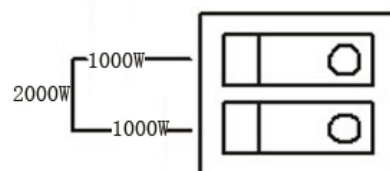

Heater power switch  
**BH GH20 (2000W)**



## **TECHNICAL SPECIFICATION**

### **BH GH10 (1000W)**

Rated voltage: 220V~ 50Hz

Rated Power: 1000W

Protection class: I

### **BH GH20 (2000W)**

Rated voltage: 220V~ 50Hz

 
Rated power: 2000W

Protection class: I

## **INSTALLATION AND MAINTENANCE**

### **ASSEMBLY OF THE HEATER**

Before using the heater, the feet (supplied in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings.

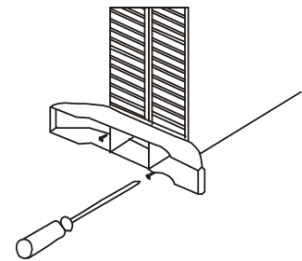

### **WALL MOUNTING**

The heater is supplied with 4 fixing brackets, screws and plastic wall plugs to enable it to be mounted onto a wall if required.

If it is decided to mount the heater on the wall, the feet should not be fitted. The position must be chosen carefully. It must not be in front of or below a power socket. It must not be below a shelf, curtains or any other obstruction.

Having decided on the location of the heater, it is necessary to drill 2 fixing holes 8mm diameter by 43mm deep at 486mm centers on a horizontal line at a minimum height of 400mm from the floor. Allowance must be made for any floor coverings, carpet etc and if any skirting boards are present, the fixing holes must be a minimum of 400mm above the top edge of the skirting board. Using the plastic plugs and fixing screws provided, attach 2 of the fixing brackets to the wall. The other pair of fixing brackets must be attached to the base of the heater using the feet retaining screws so that the brackets project out at the rear of the heater and space the bottom edge away from the wall.

If required, these brackets may also be secured to the wall using the remaining fixing screws and plastic wall plugs. If this option is chosen it is suggested that the heater is hung on the upper brackets and the hole positions for the lower brackets is then marked on the wall, prior to drilling the holes for attachment purposes.

**WARNING:** When you install your appliance in fixed position, you may cut the plug and connect the three conductors of the supply cord to a connection box in respecting the polarities as following:

- Live: Brown
- Neutral: Blue
- Earth: Yellow/Green

If you are not sure, it's recommended to ask a qualified electrician to be sure that your installation is in accordance with the local installation standard.

## **OPERATION OF THE HEATER**

- Choose a suitable location for the heater, taking into account the safety instructions above.
- Insert the plug of the heater into a suitable socket.
- Turn the thermostat knob fully in a clockwise direction to the maximum setting.
- Turn on the heating elements by means of the heater power switches on the side panel. When the heating elements are on, the switches will illuminate. For maximum heat output, both switches should be turned on.
- When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until a click off sound is heard at the thermostat and the heating element is off. After that, the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.
- In its minimum (fully anti-clockwise) position, the thermostat provides a frost guard position. In this position (depending on the size of the room) the heater will maintain the temperature above freezing.

NOTE: When the heater is turned on for the first time or when they are turned on after having not been used for a long period of time, it may release a slight odor and it is normal. This will disappear when the heater has been on a short while.

## **CLEANING THE HEATER**

Always un-plug the heater from the wall socket and allow it to cool down before cleaning. Clean the outside enclosure of the heater by wiping with a soft damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

## **STORING THE HEATER**

When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.

## **DISCLAIMER**

Updates to hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

WARRANTY:

The warranty is valid for 1 year for a "manufacturing fault".

To benefit from the warranty, please return the device to your dealer with POSTAGE PAID along with the document of purchase proof specifying the date of purchase.

**Discarding worn household devices**

The European directive 2002/96/EC pertaining to electrical and electronic waste prohibits such household goods from being discarded with local refuse services. Worn devices must be collected separately to optimize the recovery and recycling rates of the components therein to reduce detrimental effects on the environment and on human health. The "crossed out rubbish bin" symbol is affixed to all products as a reminder to respect the waste regulations.