

(EN)
DEHUMIDIFIER
Pur Line

DESAIR-12



User manual

WinEurope - FRANCE

Web : www.purline.com

Read and keep this manual for future reference.



Please read those instructions carefully before operating the unit.

NOTE: If this unit is dropped, the warranty is not valid.

IMPORTANT


- Leave the appliance to stand for two hours before connection to the mains supply after transport or when it has been tilted (e.g. during cleaning).
- Before connecting the appliance, please check if the voltage indicated at the type plate (rear side of appliance) corresponds to mains voltage in your home.
- Connect the appliance to an earth wall socket only.
- Never pour or spray water over the appliance.
- Do not remove the mains plug from the wall socket while the appliance is switched on.
- When moving the appliance: first switch off, then unplug and empty the water tank.
- Allow a free space of 20 cm around the appliance.
- Do not insert any object into the air inlet or outlet openings.
- Do not place the dehumidifier near a heating source (esp. a radiator) or indirect sunlight. Ensure that the appliance does not become hot.
- Empty the water tank regularly. (In extreme conditions the water tank may be full after a few hours operation.)
- Clean the air inlet filter if it becomes contaminated : the appliance is most effective when the filter is clean.
- Please do not expect the air dehumidifier to be effective when too many doors or windows are opened or when something in the room is producing a lot of humidity.
- The air dehumidifier will come into effect immediately. However, the reduction of humidity may hardly be measurable during the first few days.
- If the mains cord of this appliance is damaged, it must only be replaced by a qualified electrician.

General Description

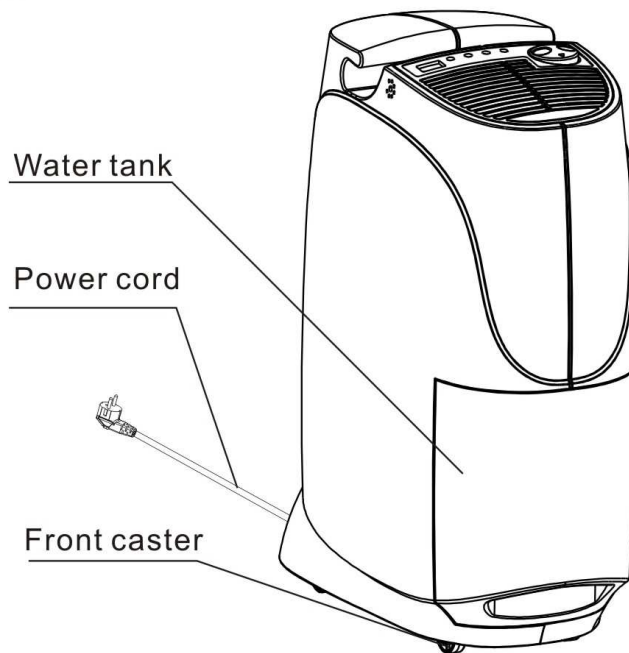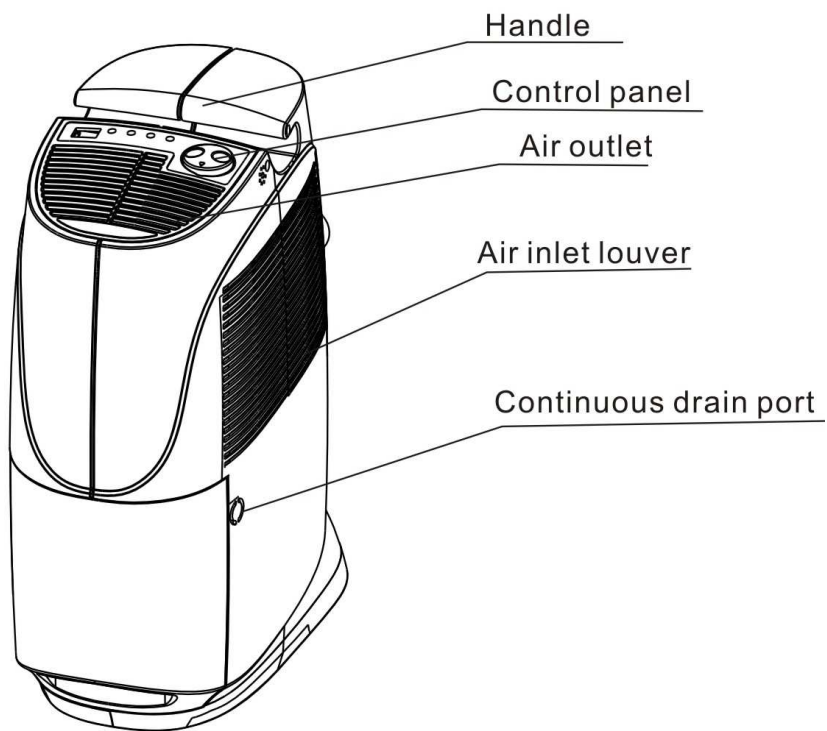

CONTROL PANEL

1. Humidity control switch
2. Operation pilot
3. Defrost pilot
4. Tank full pilot
5. Speed control (Low, High)

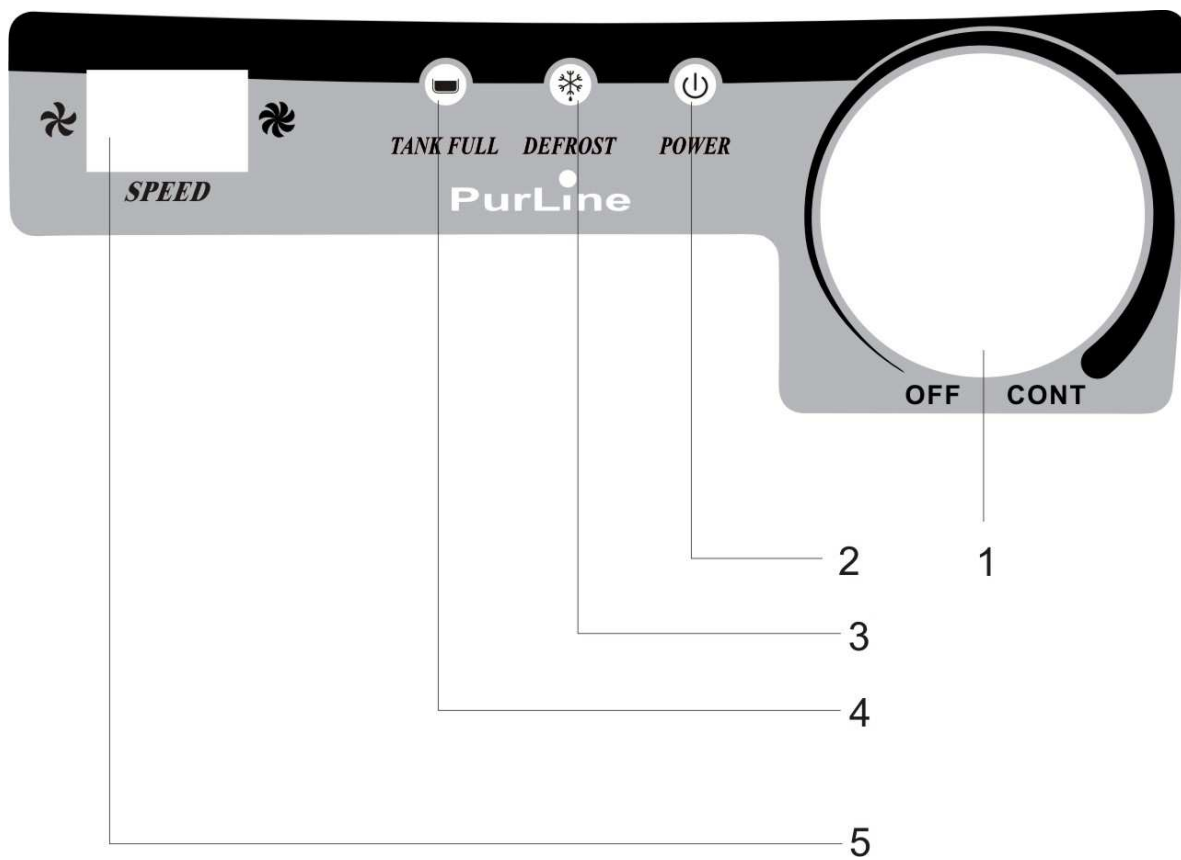

PUTTING INTO OPERATION

Place the air dehumidifier on a flat and even floor. Allow 20 cm (8") free space around the appliance. Select a place away from a heat source and not in direct sunlight, preferably close to an earth wall socket. Connect the air dehumidifier to earth wall socket. Then turn the humidity control switch clockwise to desired humidity and the air dehumidifier starts running.

Note: If the pilot fails to illuminate, please check if the water tank is not correctly seated, pull out the water tank gently and put it back again firmly.

EMPTYING THE WATER TANK

Empty the water tank regularly. When full, the air dehumidifier switches off automatically and tank full pilot comes on.

- Hold the handle of the water tank .
- Lift slightly and pull out carefully .
- Empty the water tank.
- Put the water tank back.
- The air dehumidifier can drain water continuously with 11 mm diameter drainage hose.

Do not move the appliance if the water tank is removed.

REPLACEMENT AND MAINTANCE OF AIR FILTER

Check the air filter regularly. Clean as soon as it has become dirty. If the air passage through the filter is blocked, the air humidifier cannot function properly.

- Hold the air filter by the handles and pull outward.
- For easy cleaning of filter screen, use a vacuum cleaner or rinse lightly with water (no chemicals).
- Do not forget to re-install the filter after cleaning.
- To ensure best performance clean air filter every 1-2 weeks.

CLEANING THE APPLIANCE

- Switch off (humidity control switch) and remove the mains plug from the socket.
- Empty the water tank.
- Clean the air dehumidifier with a damp cloth, if required with some liquid detergent. Do not use scourers ,abrasives, acetone, gasoline petrol etc. Leave the appliance to stand for one hour before connecting to the mains supply, if it has been tilted or knocked against during cleaning.

AUTOMATIC SWITCH-OFF

When the humidity control switch is turned on the air dehumidifier will continually monitor the humidity level in the room. As soon as the humidity level falls below the selected level the compressor will automatically switch off. The compressor will automatically switch on again when the humidity exceeds the selected level.

For optimum safety, the appliance will also switch off automatically.

- 1 If the water tank is full (approx. 3.5 liters.)
- 2 If the water tank is removed

HOW THE AIR DEHUMIDIFIERS WORKS

The fan draws the humid air first through the air inlet filter and then through the metal radiator. This radiator is cooled by a compressor. The water condensates and drips into the water tank .The dried air is expelled into the room. The air dehumidifier can automatically maintain the relative humidity at a pre-selected level in rooms up to 100 cubic meters.

The appliance is able to extract up to 14 liters of water per day (30 C /86 F, relative humidity = 80%).

The air filter removes and collects airborne dust.

Whilst in operation, the appliance produces some heat which may raise the room temperature by 1~2 C (or approx. 3 F)

HOW THE AUTO DEFROST WORKS

When the temperature is under 12 C, the evaporator will start to frost and affect the dehumidifying result. This unit will defrost automatically once each hour, and the defrost pilot indicator will light up.

HOW TO USE CONTINUOUS DRAINAGE

To use continuous drainage remove the rubber cap from the continuous drainage port located on the back of the unit. Transfer the rubber cap to the tank drainage outlet and replace the water tank. Finally attach an 11mm I/D PVC hose to the continuous drainage port ensuring the hose is directed downwards, allowing water to flow by gravity to an external drain.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Warranty :

The warranty is valid for 1 year for a « manufacturing fault ».

To benefit from the warranty, please return the device to your dealer with POSTAGE PAID along with the document of purchase proof specifying the date of purchase.



Removal of used domestic appliances

European directive 2002/96/EC on the Electric and Electronic Equipment Waste requires that domestic appliances not be thrown out together with the rest of municipal waste. Used devices must be collected separately in order to optimize recuperation and recycling rates of the materials that make them up and so reduce the impact on human health and the environment.

The symbol of the crossed out garbage can appears on all the products to remind the obligations regarding separated collection.

Consumers must contact local authorities or resellers regarding the procedure to follow for the device's removal.