

(EN)
Pur Line
BHF-2000
MOBILE ELECTRIC CONVECTOR



Owner's Manual

WinEurope - FRANCE

Site : www.purline.com

Read and keep this manual for future reference.

Please read this instructions carefully before operating the unit.

Do not take any risks : follow the instructions set out below.
If you do not follow our recommendations you may put yourself, others and your property in danger.

GENERAL SAFETY INFORMATION.

1. Use this convector **only** as advised in this manual. Any other use not recommended by the manufacturer could cause fire, electrical shock, burns or personal injury.
2. Make sure that the power source conforms to the heater electrical requirements (220-240 VAC/50Hz) see the rating plate located at the bottom of the unit. The convector must be plugged directly into a **grounded/earthed** electrical socket. Unwind carefully the electric cord it should not come into contact with the unit. Never put the heater directly below an electrical wall socket.
3. The On/Off power switch should be in the Off position when either plugging the convector in or unplugging it.
4. Extreme caution is required when the convector is running near children or invalids and whenever the convector is left unattended.
5. To reduce the risk of fire or electric shock, the unit plug should fit perfectly into the electrical socket. If it does not fit properly contact a qualified electrician
6. If the electrical cord, plug, unit are damaged, in order to avoid potential hazards, do not use the appliance but return it to an authorized service facility for repair.
7. To avoid the risk of fire : Do not put anything to dry on the convector. Do not cover it or place it close to flammable materials or on a bed.
8. Always place the convector on a stable, hard, level surface . Ensure that there are no objects or piece of furniture resting on top of the electrical cord. Do not run the electrical cord

under carpeting or rugs. Arrange the electrical cord away from room traffic to avoid the cord being tripped over.


9. Do not handle the unit when it is running : its surface can reach **60°C** . Always use the handle if you absolutely have to move the convector. You must keep combustible materials, such as bedding, pillows, curtains, rugs, clothes etc. as far away as possible from the unit.
10. For safety purposes the convector must not be used in a bathroom, do not use the convector near a sink, a swimming pool, etc.

Never immerse the unit in water.

11. This convector is intended for domestic use only.
12. The convector is not intended to be used outdoors.

If the power cord is damaged, it must be changed by a qualified electrician or the manufacturer to avoid any danger.

DESCRIPTION:

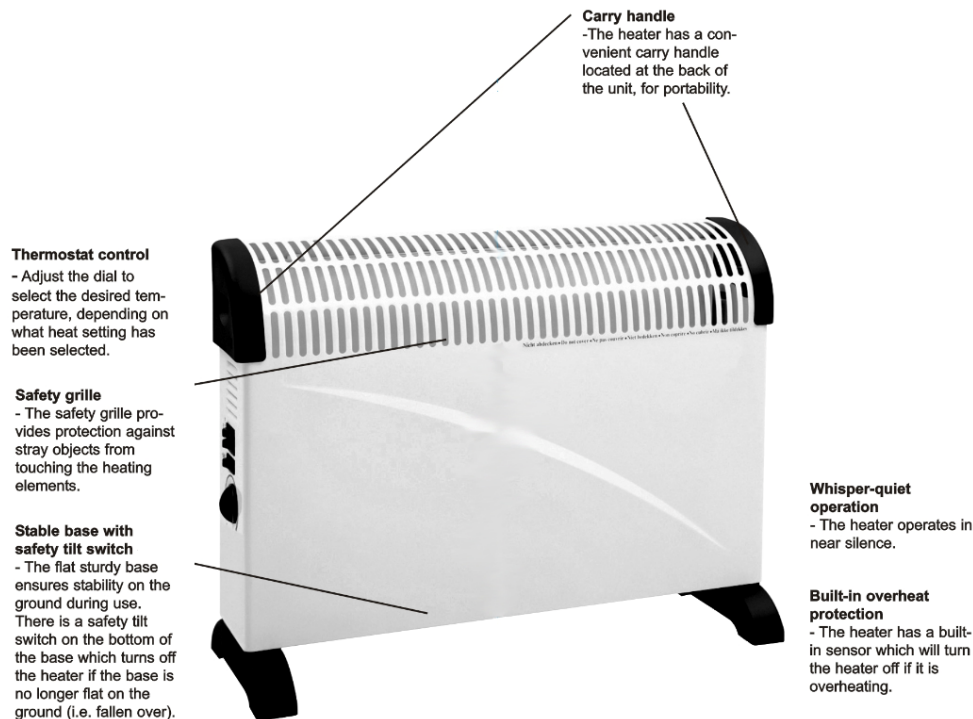

NOTE : The convector will operate differently according to the size of the room in which it is used. (If it is used in a very large room, the gap between the set temperature and the actual temperature of the room could be quite substantial).

MAINTENANCE

WARNING:

- **ALWAYS SWITCH OFF AND UNPLUG THE CONVECTOR BEFORE CLEANING OR SERVICING.**
- **NEVER IMMERSE THE UNIT IN WATER**

CLEANING :

1. Switch off and unplug the convector, wait 5-10 minutes for the unit to cool down.
2. Using a soft cloth, clean the body of the convector carefully.
Never use alcohol , solvents, acids like vinegar or abrasives.

STORAGE :

Pack the convector and these instructions in the original packing. Store in a dry place.

TECHNICAL DATA :

	BHF-2000	BHF-2000D
Dimensions	53 x 11.5 x 37 cm	53 x 11.5 x 37 cm
Net weight	2 kg	2.4 kg
Gross Weight	2.95 kg	3 kg
Input voltage	220 / 240 V AC – 50 Hz	220 / 240 V AC – 50 Hz
Power consumption	2000 W	2000 W
Turbo	-	√
UPC / EAN	3700046513362	3700046513485

❖ **Characteristics prone to change without notice**

WARRANTY:

The warranty is valid for 1 year for a "manufacturing fault".

To benefit from the warranty, please return the device to your dealer with **POSTAGE PAID** along with the document of purchase proof specifying the date of purchase.



Discarding worn household devices

The European directive 2002/96/EC pertaining to electrical and electronic waste prohibits such household goods from being discarded with local refuse services. Worn devices must be collected separately to optimize the recovery and recycling rates of the components therein to reduce detrimental effects on the environment and on human health. The “crossed out rubbish bin” symbol is affixed to all products as a reminder to respect the waste regulations.