

(EN)

CERAMIC TOWER HEATER with Remote Control

Pur Line

Model

HEATY 187B



User's Manual.

WinEurope - FRANCE

 0.825.875.532

Internet : www.purline.com

Read all these instructions carefully before using this product.

- MAKE SURE THAT THE VOLTAGE RATING ON THE TYPE PLATE CORRESPONDS TO YOUR MAIN VOLTAGE. IF NOT, SEE YOUR RETAILER AND DO NOT CONNECT THE APPLIANCE.
- Never leave the appliance unsupervised when in use.
- If you have to leave, even a short moment, stop the appliance.
- Keep out of children or incompetent persons and do not allow them to operate this appliance.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- From time to time, check the cord for damages. Never use the appliance if cord or appliance show any sign of damage.
- Never place the appliance under any electrical connector.
- Make sure that the connection cord does not touch any hot surface.
- Keep combustible materials such as drapes, clothing, towels away from the appliance.
- Do not cover the appliance.
- Keep the appliance at least 6 inches away from walls and any other thing, to permit a good air circulation.
- Never immerse the product in water or any liquid for any reasons. Do not use it near a shower, a bath-tub or a swimming-pool.
- Do not use the appliance outdoor.
- Do not use if you have wet hands.
- Never use the appliance on or near hot surfaces.
- Never move or range the appliance by pulling the cord.
- Before tidying the appliance, make sure that it is unplugged from the power and that it is completely cooled.
- Unplug the appliance before cleaning.
- Do not clean the appliance with abrasive chemicals.
- Do not introduce neither metallic objects, nor fingers inside the appliance in order to protect you from electrical shock.

- Never use accessories that are not recommended or supplied by the manufacturer. It could constitute a danger to the user and risk to damage the appliance.
- All interventions made by a non-qualified person can be dangerous; in this case guarantee conditions would cancel. As all electrical products, a competent electrician must repair it.

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


SAVE THESE INSTRUCTIONS CAREFULLY

DESCRIPTION

This appliance adopts the advanced PTC ceramic material as heating unit, transports the warm winds by forcing the air convection. This product has a 90° swing device, that can distribute the heat in several directions. During the hot days, stop the heating function, and the appliance can be used as a fan.

COMPONENTS NAME LCD PANEL

1. ON/OFF key
2. Function key
3. Oscillation key
4. Mode key
5. + Key
6. - Key
7. LCD display

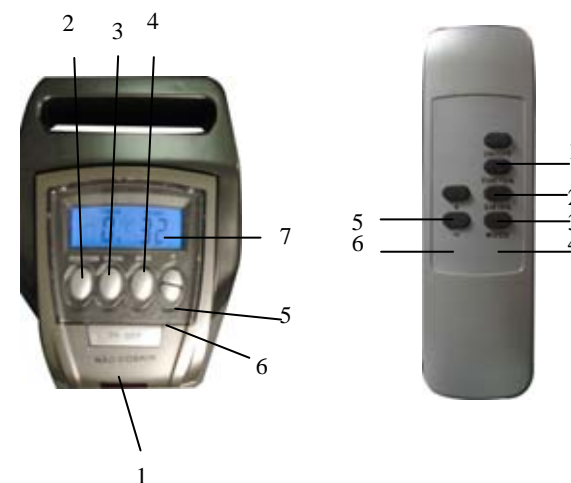

OPERATING INSTRUCTIONS

- Insert the plug into the socket.
- All functions can be obtained by using keys of the control panel as well as the remote control. **(Batteries not included)**
- Press the ON/OFF key (1).

Function Key:

- Press the function key (2) to select the desired function:
 - Fan only
 - Slow warming (1000 W)
 - High warming (2000 W)

Oscillation Key:

- To start swinging, press the OSCILLATION key (3).

- To stop swinging, press again on the key (3).

Mode Key:

Timer

- Press the MODE key (4) until TIMER appears in the digital display (It will flash). Press the “+” key or the “-” key to select the desired time. You can control the time setting on the display. The timer indicator lights on. To stop the operating time before the end, press the off key.
- It is possible to add several times to set the appliance between 1/2 hour and 7:30 h.
- Once the set time is finished, the appliance shuts off.

Temperature

- Press the MODE key (4) until TEMPERATURE shows on the display (It flashes). Press the “+” key or the “-” key to select the desired temperature. One pressure corresponds to 1°C, you can choose your temperature between 1 to 40 °C.
- To stop the appliance, press the ON/OFF knob (1). Fan is still operating for 30’.
- Unplug the appliance when not in use.

MAINTENANCE

- Before any cleaning or maintenance operation, switch off and unplug the appliance. Ensure it is perfectly cooled.
- To remove the dust, wipe your appliance with a cloth.
- Never use abrasives or detergents.

OVERHEAT and TIPOVER PROTECTION

This product has protective safeguards that shut off the product when parts become excessively hot or it tips over. If overheated, switch off your fan heater and remove the mains plug from the power socket. Allow your ceramic fan heater to cool for 20 minutes. Carefully check for any obvious causes such as curtain or clothes that may have prevented air from entering the fan heater. Refit the

mains plug into the socket and turn your fan heater on. Your fan heater should now work normally.

Technical Specifications

Dimensions	260 x 190 x 720 mm
Net weight	5.05 kg
Current	230 V
Absorbed Power	1000 W and 2000 W

WARRANTY:

Two years from the date of purchase.

To use the warranty, please bring or send (PREPAID) the device to your reseller along with the proof of sale indicating the purchase date.



Removal of used domestic appliances

European directive 2002/96/EC on the Electric and Electronic Equipment Waste requires that domestic appliances not be thrown out together with the rest of municipal waste. Used devices must be collected separately in order to optimize recuperation and recycling rates of the materials that make them up and so reduce the impact on human health and the environment.

The symbol of the crossed out garbage can appears on all the products to remind the obligations regarding separated collection. Consumers must contact local authorities or resellers regarding the procedure to follow for the device's removal.