

INSTRUCTION MANUAL

SECO 12

LOW TEMPERATURE DEHUMIDIFIER

Ecology unit No Compressor / No Gas

PURLINE



WinEurope - FRANCE


Web : www.purline.com

GB OPERATING INSTRUCTIONS

SAFETY WARNINGS

Please read these instructions carefully before using the appliance.

1. Unplug the power supply cord before cleaning or storage.
2. Do not submerge the unit in water, or place the unit close to water.
3. Do not put the unit close to heat-generating devices or near flammable and dangerous materials.
4. Never put your fingers or objects into the intake or discharge ducts.
5. Do not sit or stand on the unit.
6. Discard water that has collected in the tank as required
7. Do not operate the dehumidifier in a closed area such as inside a closet, as it may cause a fire
8. Install drain piping at a downhill grade to make sure that condensed water can be drained continuously.
9. **Important:** People (including children) who are not able to use the appliance in a safe way, due to their physical, sensorial or mental capacity or their lack of experience or knowledge, must never use the appliance except if they are supervised by a person responsible for their safety or if they previously received instructions concerning the safe use of the appliance.
Close supervision is necessary to prevent children from using the appliance as a toy.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. This product complies with directives 2006/95/EC (LVD) and 2004/108/EC (EMC)
12. This product must be installed according to national fittings standards
13. Never use the appliance outside and always place it in a dry environment.
14. Maintain the minimum clearance

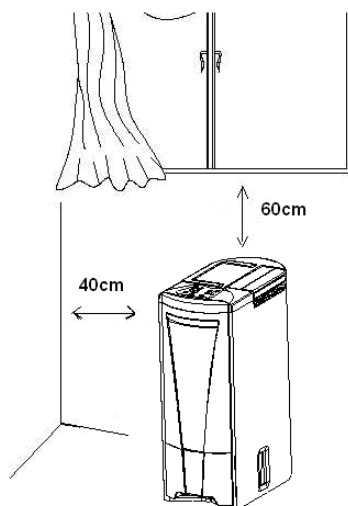

15. The appliance shall be installed in accordance with national wiring regulations
16. For domestic and indoor use only

A thermal magnetic circuit breaker or a standard 16A fuse must be installed up stream of the main switch of the appliance.

The operational temperature is in the range of 1°C to 40°C. If the room temperature is outside of this range, the unit will not operate normally.

FEATURES

Powerful Dehumidifying Capability

Taking advantage of the new technology without refrigerant, the dehumidifier powerfully removes moisture from the air to decrease the humidity level of the room and keep the indoor air dry and comfortable.



Lightweight Portable Design

The dehumidifier is built to be compact and lightweight

Low Temperature Operation

The unit is running in a room temp. between 1°C and 40°C/>50%RH

PRODUCT DIAGRAM

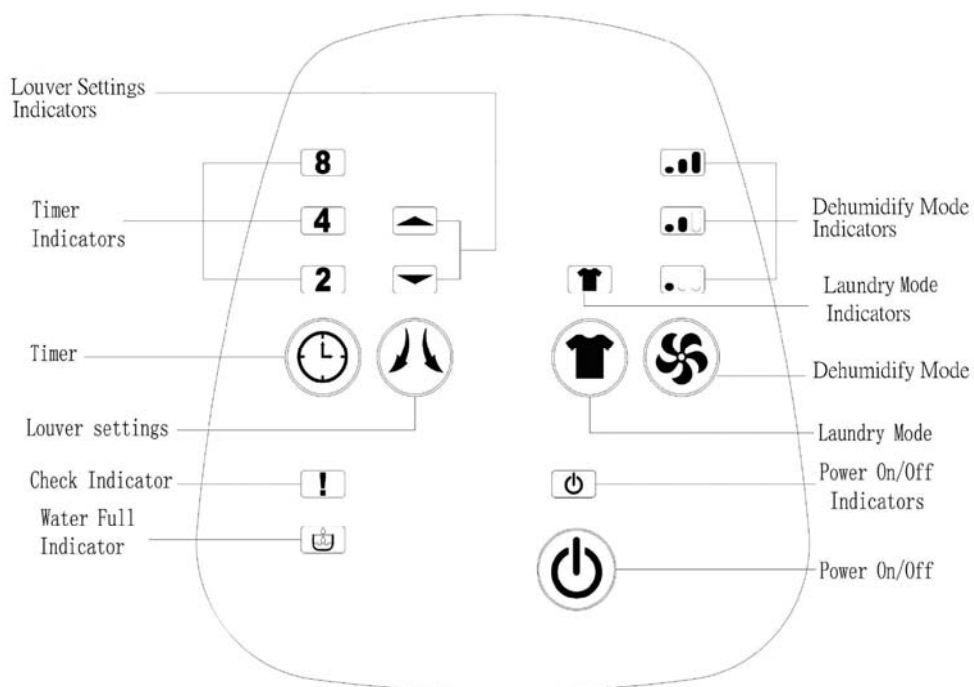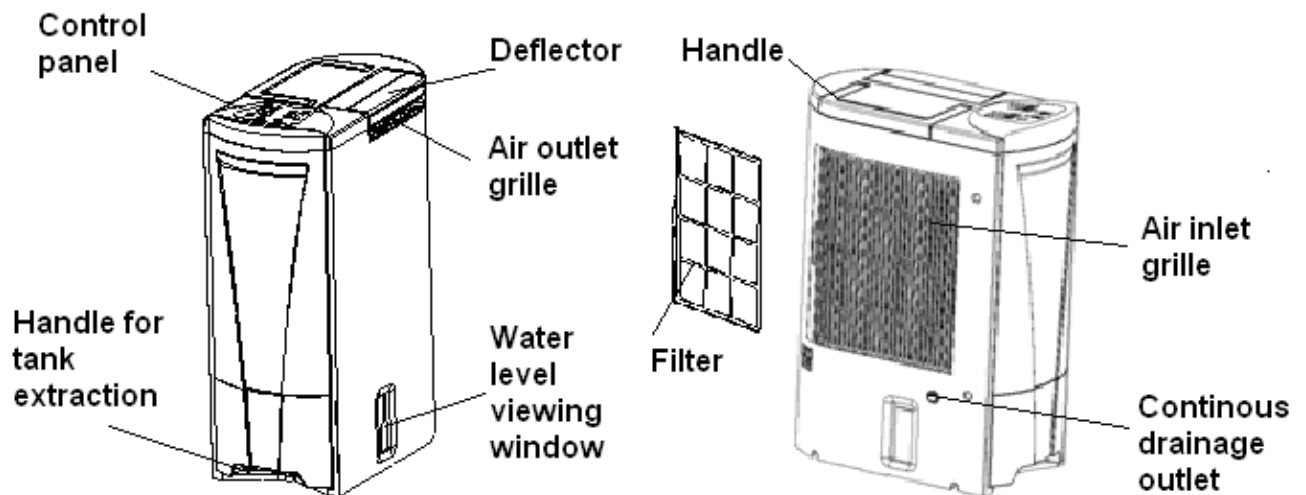

OPERATING INSTRUCTIONS


Plug the appliance into a mains socket.


Press the Power ON/OFF button.


Make sure the water tank full light is off

Press again to switch OFF

IMPORTANT: Before unplugging from the mains, wait for the fan to stop. The fan remains in operation for about two minutes after the appliance is turned off to allow the heating element to cool down.

Press the dehumidification button  Each time you press it, the relative light comes on (Maximum, medium, minimum).


To dry the laundry, select the corresponding button.  You can choose low speed. Laundry mode indicator turns on.

Press the swing button  to set automatic swing of the deflector choosing between: front – vertical – fixed position.

Front: Air output front, swing deflector 0°~60°

Vertical: Air output vertical, swing deflector 30°~90°

Fixed position: stop the deflector in its current position.

Each time the timer button  is pressed, the number of hours the appliance operates changes (8-4-2 hours)

Check indicator light is on, wait about 10 minutes. Then switch it back. The appliance should operate normally.

Should the problem persist, please contact the nearest customer service.

DRAINING THE COLLECTED WATER

When the drainage tank is full, the dehumidifier will stop automatically, the tank full indicator light will turn on to alert the user that the water needs to be emptied from the drainage tank.

Emptying the Drainage Tank

- Extract the tank slowly using the designed grip, holding the appliance firmly.
- Remove the lid.
- Empty the tank.
- Replace the lid.
- Put the tank back in the appliance.

NOTE

1. DO not remove the float from the water tank. The water full sensor will no longer be able to detect the water level correctly without the float and water may leak from the water tank.
2. If the drainage tank is dirty, wash it with cold or lukewarm water. Do not use detergent, scouring pads, chemically treated dust cloths, gasoline, benzene, thinner, or other solvents, as these can scratch and damage the tank and cause water leakage
3. When replacing the drainage tank, press the tank firmly into place with both hands. If the tank is not positioned

properly, the “Water Full” sensor will be activated , and the dehumidifier will not operate.

Continuous Water Drainage

The unit features a continuous drainage port .Using a plastic pipe, the water in the drainage tank can be continuously drained out from the continuous port on the unit.

MAINTENANCE

Cleaning the Dehumidifier

To clean the Body

Wipe it with a soft damp cloth.

To Clean the Air Filter

- 1.Remove the air filter
- 2.Clean the air filter

Run a vacuum cleaner lightly over the surface of the air filter to remove dirt. If the air filter is exceptionally dirty, wash it with warm water and a mild cleanser and dry thoroughly.

- 3.Insert the filter into the unit smoothly.

Storing the Dehumidifier

When the unit is not being used for a long period of time and you want to store it. Note the following steps:

- 1.Empty any water left in the drainage tank
- 2.Fold up the power supply cord.
- 3.Clean the air filter
- 4.Discard in a cool and dry place .

TROUBLESHOOTING

If the conditions listed below occur, please check the following items before calling the customer service.

Problem	Possible Cause	Solution
The unit doesn't operate	Has the power cord been disconnected?	Plug the power cord into the outlet.
	Is the tank full indication lamp blinking? (The tank is full or in a wrong position.)	Empty the water in the drainage tank and then reposition the tank.
	Is the temperature of the room above 40°C or below 1°C?	The protection device is activated and the unit cannot be started.
The dehumidifying function doesn't work	Is the air filter clogged?	Clean the air filter as instructed under "Cleaning the dehumidifier".
	Is the intake duct or discharge duct obstructed?	Remove the obstruction from the discharge duct or intake duct.
No air is discharged	Is the air filter clogged?	Clean the air filter as instructed under "Cleaning the dehumidifier".
Operation is noisy	Is the unit tilted or unsteady?	Move the unit to a stable, sturdy location.
	Is the air filter clogged?	Clean the air filter as instructed under "Cleaning the dehumidifier".

220-240V ~ 50Hz

630W

Equivalent to 24 liter/day at a room temperature of 15°C with a relative humidity of 60%

8 liter/day at a room temperature of 30°C with a relative humidity of 80%

6.5kg

Water tank capacity 2 liters

Fuse: F1A/250VAC – 1 ampere

WARRANTY :

1 year from the date of purchase.

To use the warranty, please bring or send (PREPAID) the device to your reseller along with the proof of sale indicating the purchase date.



Removal of used domestic appliances

European directive 2002/96/EC on the Electric and Electronic Equipment Waste requires that domestic appliances not be thrown out together with the rest of municipal waste. Used devices must be collected separately in order to optimize recuperation and recycling rates of the materials that make them up and so reduce the impact on human health and the environment.

The symbol of the crossed out garbage can appears on all the products to remind the obligations regarding separated collection.

Consumers must contact local authorities or resellers regarding the procedure to follow for the device's removal.