

(EN)
OIL HEATER
Pur Line

NDB07N – NDB09N– NDB11N



User manual

WinEurope - FRANCE

N°Indigo 0.825.875.532

Web : www.purline.com

Read and keep this manual for future reference.

Please read those instructions carefully before operating the unit.

Do not take any risks: follow the instructions set out below.
If you do not follow our recommendations you may put yourself, others and your property in danger.

NOTE: If this unit is dropped, the warranty is not valid.


GENERAL SAFETY INFORMATION.

1. Use this oil heater **only** as advised in this manual. Any other use not recommended by the manufacturer could cause fire, electrical shock, burns or personal injury.
2. Make sure that the power source conforms to the heater electrical requirements (220-240 VAC/50Hz) see the rating plate located at the bottom of the unit. The heater must be plugged directly into a **grounded/earthed** electrical socket. Unwind carefully the electric cord it should not come into contact with the unit. Never put the heater directly below an electrical wall socket.
3. **The oil heater should only be used with the castors supports fitted (illustrations 2 to 6).**
4. The power switch should be in the 0 position when either plugging the heater in or unplugging it.
5. Extreme caution is required when the heater is running near children or invalids and whenever the heater is left unattended.

6. To reduce the risk of fire or electric shock, the unit plug should fit perfectly into the electrical socket. If it does not fit properly contact a qualified electrician
7. This unit contains a set amount of oil therefore DO NOT try to repair it yourself. If the electrical cord, plug, unit are damaged, it must be changed by a qualified electrician or the manufacturer to avoid potential hazards, do not use the appliance but return it to an authorized service facility for repair.
8. To avoid the risk of fire: Do not put anything to dry on the heater. Do not cover it or place it close to flammable materials or on a bed.
9. Always place the heater on a stable, hard, level surface. Ensure that there are no objects or piece of furniture resting on top of the electrical cord. Do not run the electrical cord under carpeting or rugs. Arrange the electrical cord away from room traffic to avoid the cord being tripped over.
10. Do not handle the unit when it is running: its surface can reach **60°C** . Always use the handle if you absolutely have to move the heater. You must keep combustible materials, such as bedding, pillows, curtains, rugs, clothes etc. as far away as possible from the unit.
11. For safety purposes the heater must not be used in a bathroom, do not use the heater near a sink, a swimming pool, etc. **Never immerse the unit in water.**
12. This heater is intended for domestic use only.
13. The heater is not intended to be used outdoors.


WARNING : DO NOT DEPEND ON THE ON/OFF BUTTON OR SWITCH AS THE SOLE MEANS OF DISCONNECTING POWER WHEN SERVICING OR MOVING THE HEATER. ALWAYS UNPLUG THE POWER CORD.

FITTING THE CASTORS (see below illustrations 2 to 6)

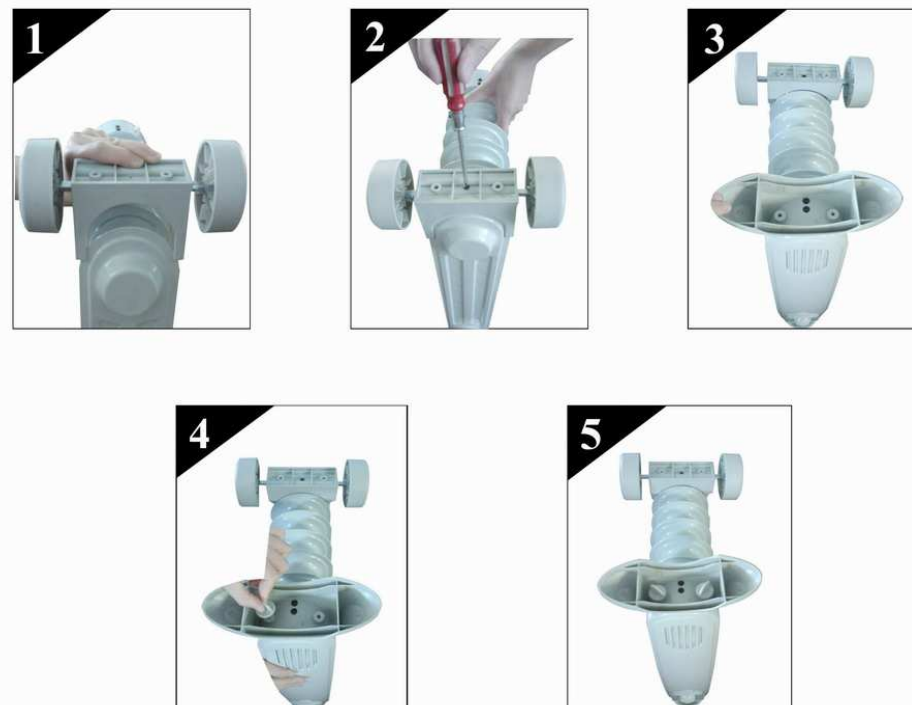

Put the radiator in the upright position and leave for an hour before switching on.

DESCRIPTION :

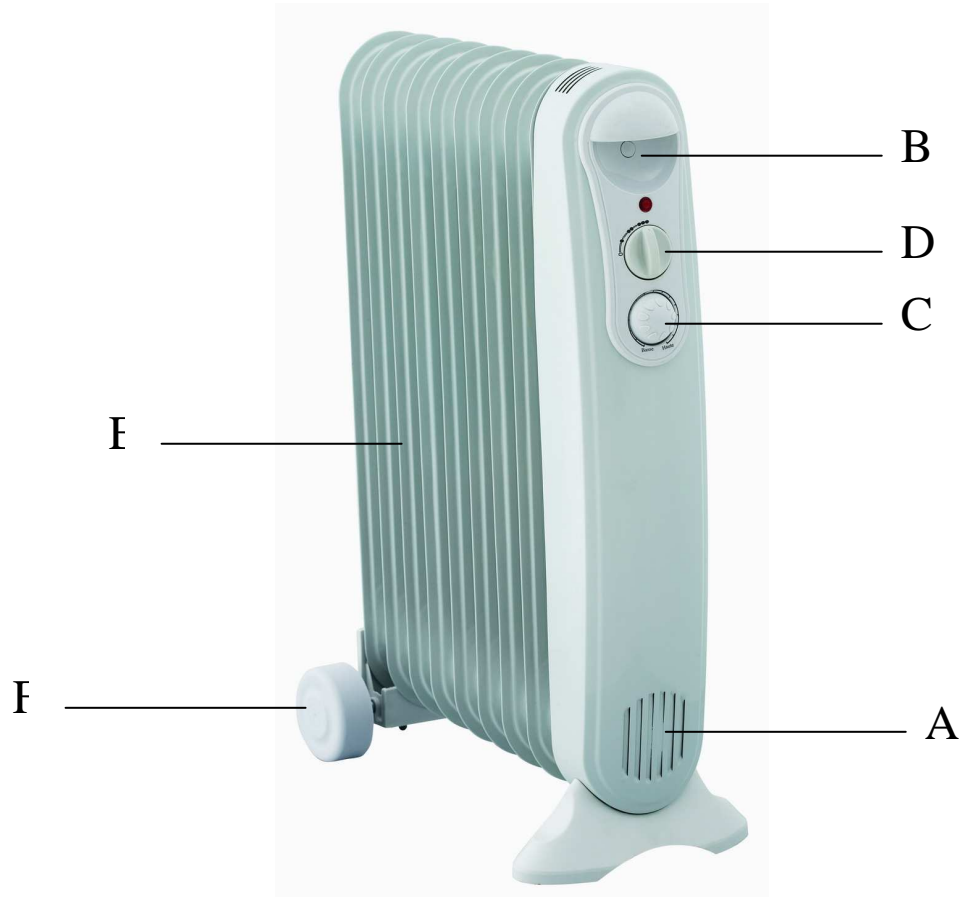

- A:** Ventilation holes
- B:** Handle
- C:** Thermostat control
- D:** Switch knob
- E:** Oil heater
- F:** Castors

CONTROL PANEL :



SETTING THE THERMOSTAT:

1. The oil heater has 2 heating elements (D).
2. You may adjust the room temperature by rotating the thermostat knob (C) from « - » to « + » position.
 - a. Plug the heater in (Warning: the cable must be fully unwind and not in contact with the heater).
 - b. Turn the thermostat to « + » .
 - c. The Power light will illuminate.
 - d. When the room has reached the desired temperature, slowly move the thermostat knob counter-clockwise when the Power light goes off it indicates that the thermostat too is off. Leave it in this position.
 - e. When the room temperature falls below the required level the power light will illuminate again and the heater will start running.
 - f. The thermostat switches itself on and off keeping the room temperature at the desired level.

When this device is overheated it is automatically turned off by a special security system. Unplug the device and let it cool down before activating it again.

NOTE : The oil heater will operate differently according to the size of the room in which it is used. (If it is used in a very large room, the gap between the set temperature and the actual temperature of the room could be quite substantial).

WARNING:

- **ALWAYS SWITCH OFF AND UNPLUG THE HEATER (button on 0 position + thermostat on minimum position) BEFORE CLEANING OR SERVICING.**
- **NEVER IMMERSE THE UNIT IN WATER**

CLEANING :

1. Switch off and unplug the heater , wait 5-10 minutes for the unit to cool down.
2. Using a soft cloth, clean the body of the heater carefully.
Never use alcohol , solvents, acids like vinegar or abrasives.

STORAGE :

Pack the heater and those instructions in the original packing. Store in a dry place.

TECHNICAL DATA :

	NDB-07N	NDB-09N	NDB-11N
Dimensions	35x21,5x62,5mm	43x21,5x62,5mm	51x21,5x62,5mm
Net Weight	6.2 kg	7.5 kg	8.7 kg
Voltage	220-240V	220-240V	220-240V
Input voltage	1500 W	2000 W	2500 W

❖ Characteristics prone to change without notice

warranty :

The warranty is valid for 1 year for a « manufacturing fault ».

To benefit from the warranty, please return the device to your dealer with POSTAGE PAID along with the document of purchase proof specifying the date of purchase.



Removal of used domestic appliances

European directive 2002/96/EC on the Electric and Electronic Equipment Waste requires that domestic appliances not be

thrown out together with the rest of municipal waste. Used devices must be collected separately in order to optimize recuperation and recycling rates of the materials that make them up and so reduce the impact on human health and the environment.

The symbol of the crossed out garbage can appears on all the products to remind the obligations regarding separated collection.

Consumers must contact local authorities or resellers regarding the procedure to follow for the device's removal.